




WASHINGTON ONE RECORDS 104744 FAX
 TIMER AS - SUN INDUSTRY
 - SUN AZZELLE
 - SUN TURBULLO

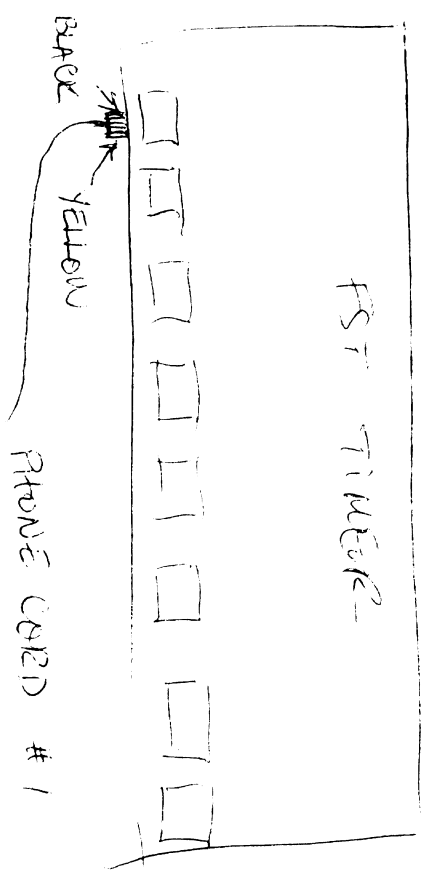


GEMINI TAG 1
 TELEPHONE SPACE
 STACK

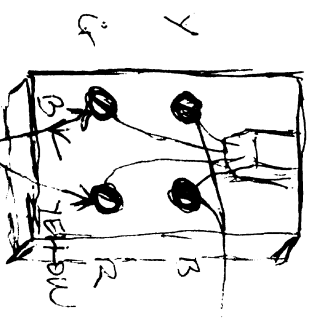

USED BLACK & YELLOW
 PHONE CORD # 2

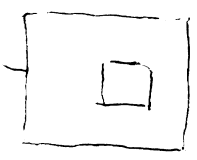

INSTRUCTION

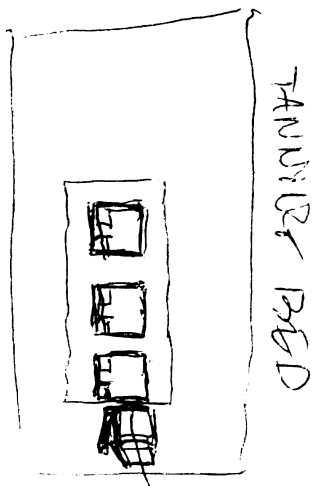

- ① Plug a modular phone cord # 1 from FS1 timer to
- ② Use a second phone cord # 2 for FS1 wall switch (only black & yellow are used)
- ③ Use a third phone cord # 3 to connect to timing bed

(Also used only YELLOW & BLACK)

④ Program Bed timer
 then cycle Power to Bed

P:05 to 1
 P:26 to 1
 Bed